



# Install FT232R Uart Driver


Step 1:

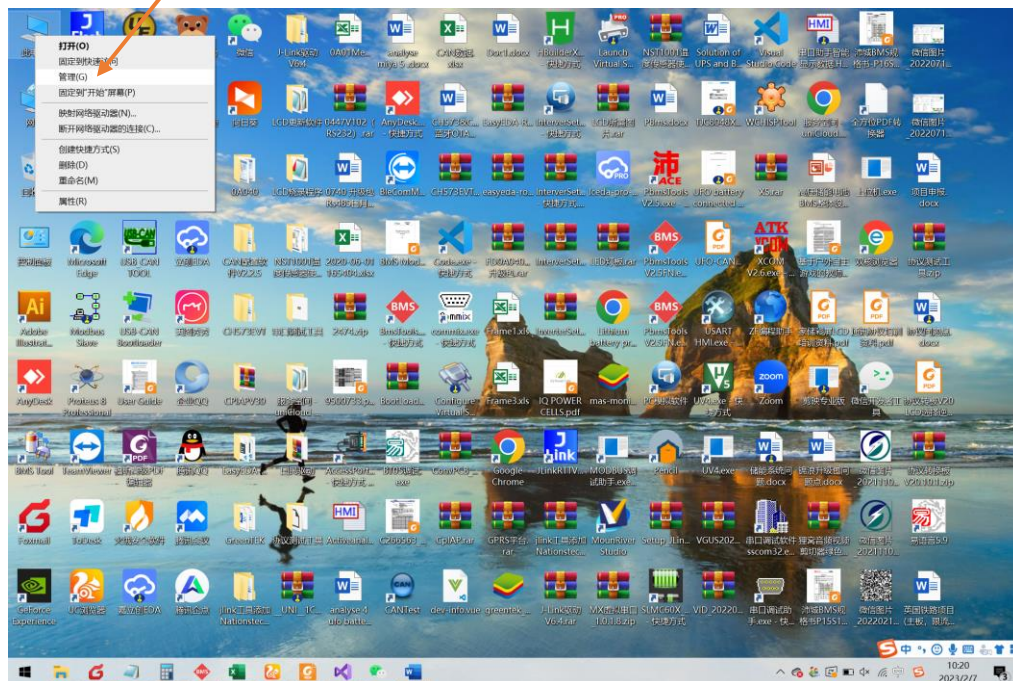


Step 2:

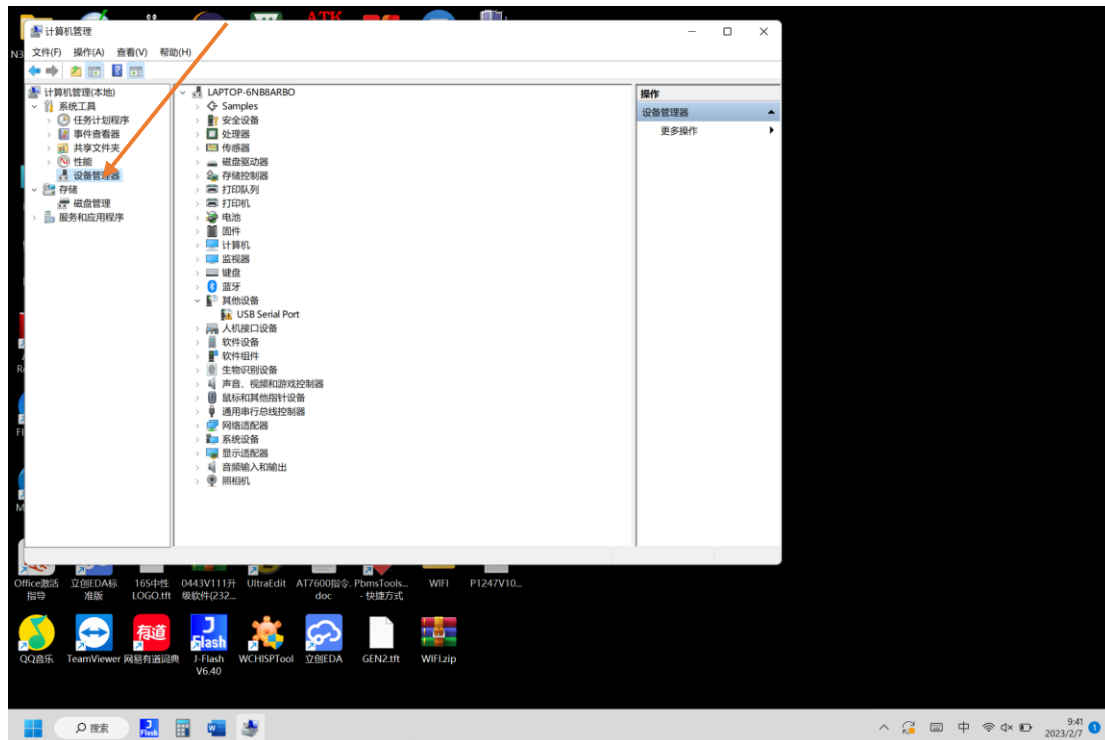


Step 3:

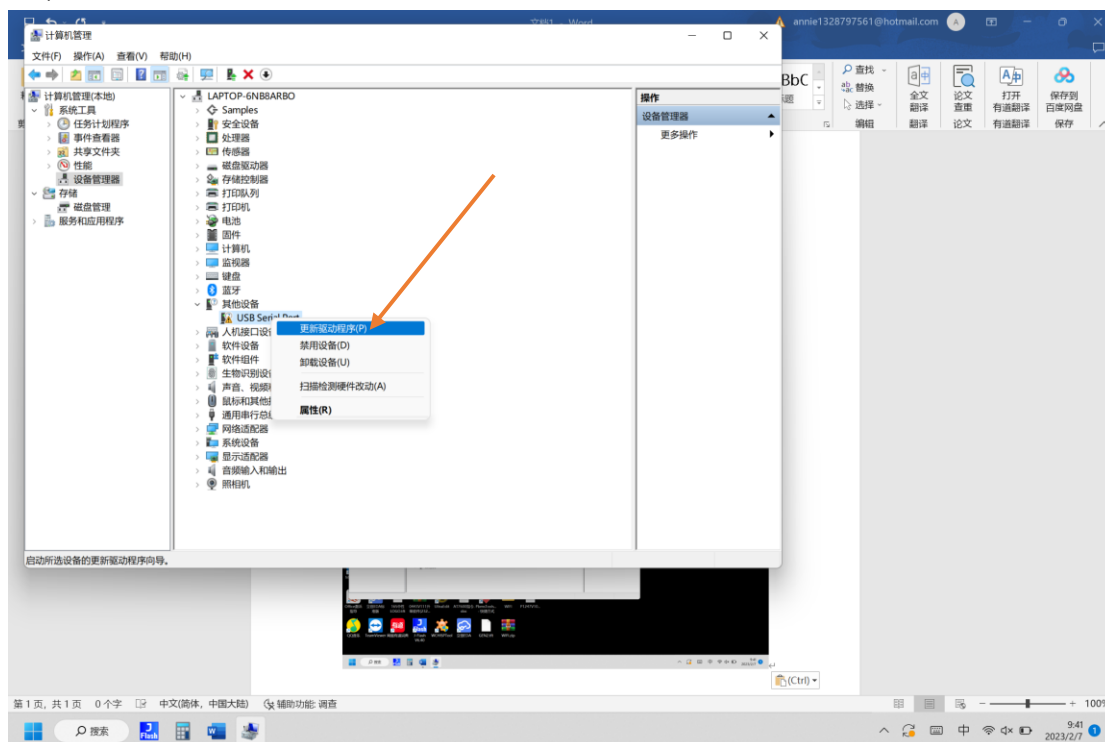



#### Step 4:

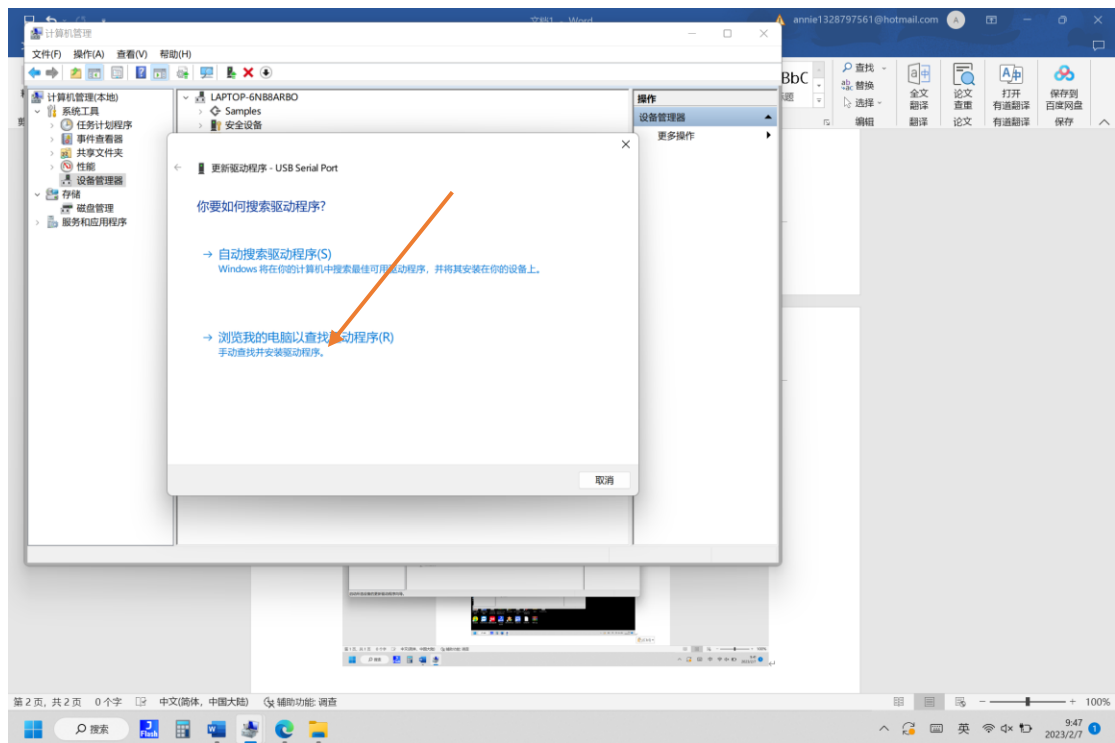

#### Step 5:

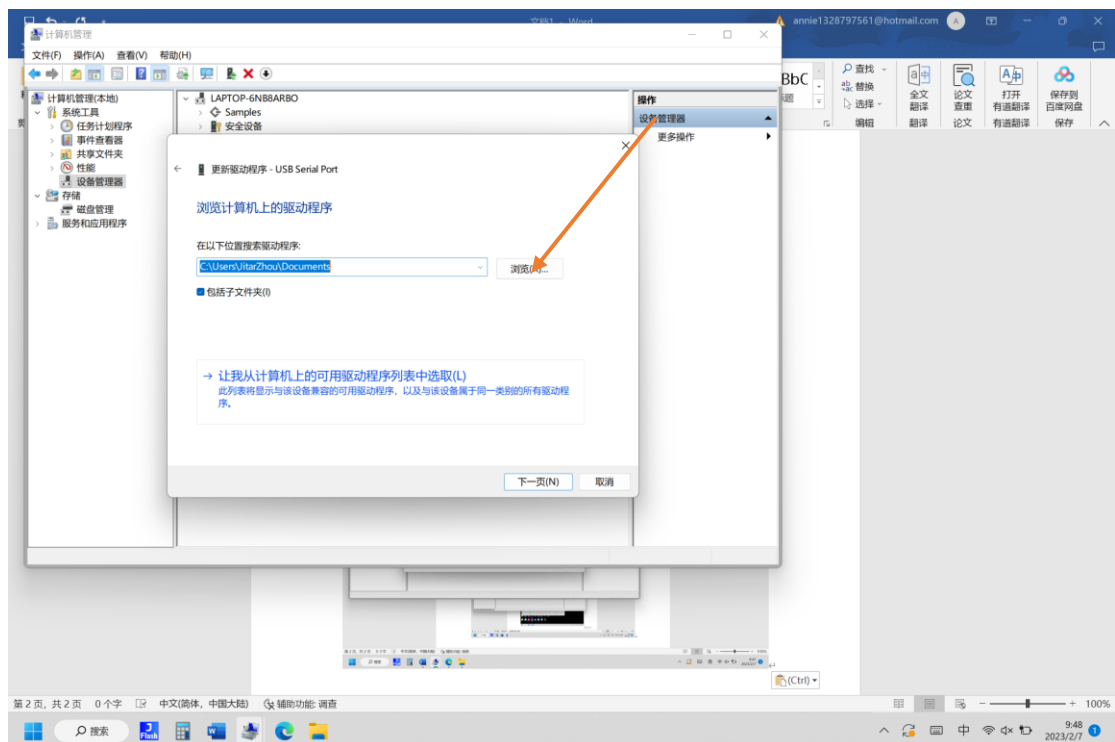

Step 6:

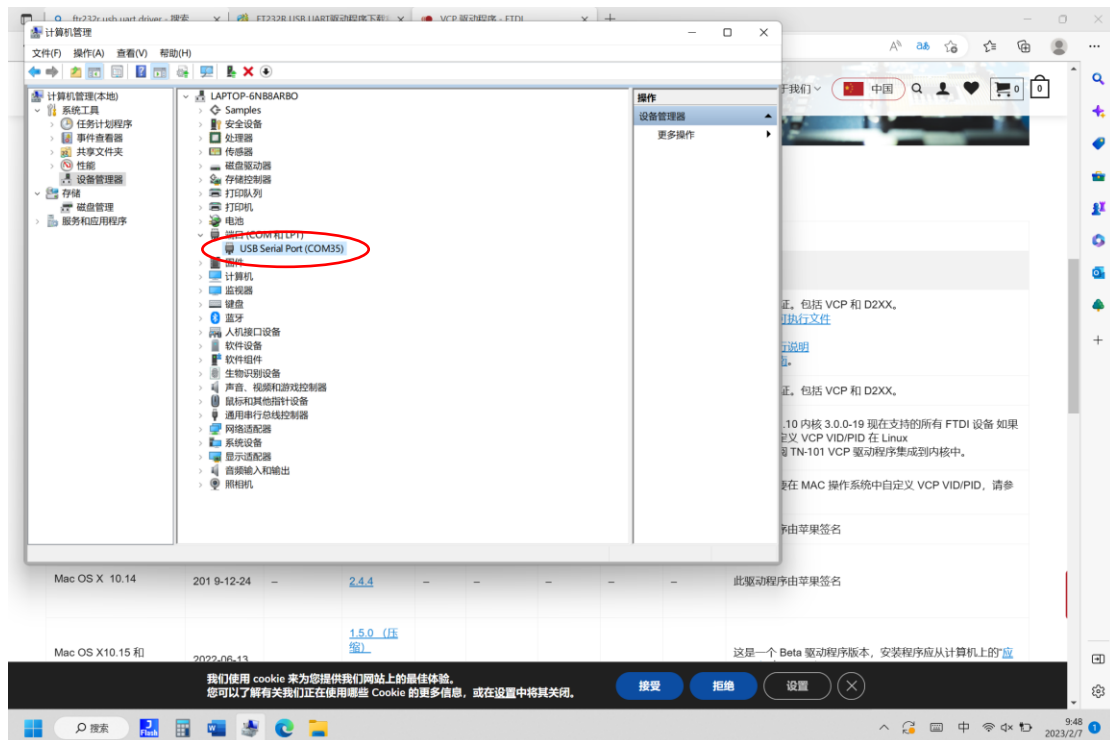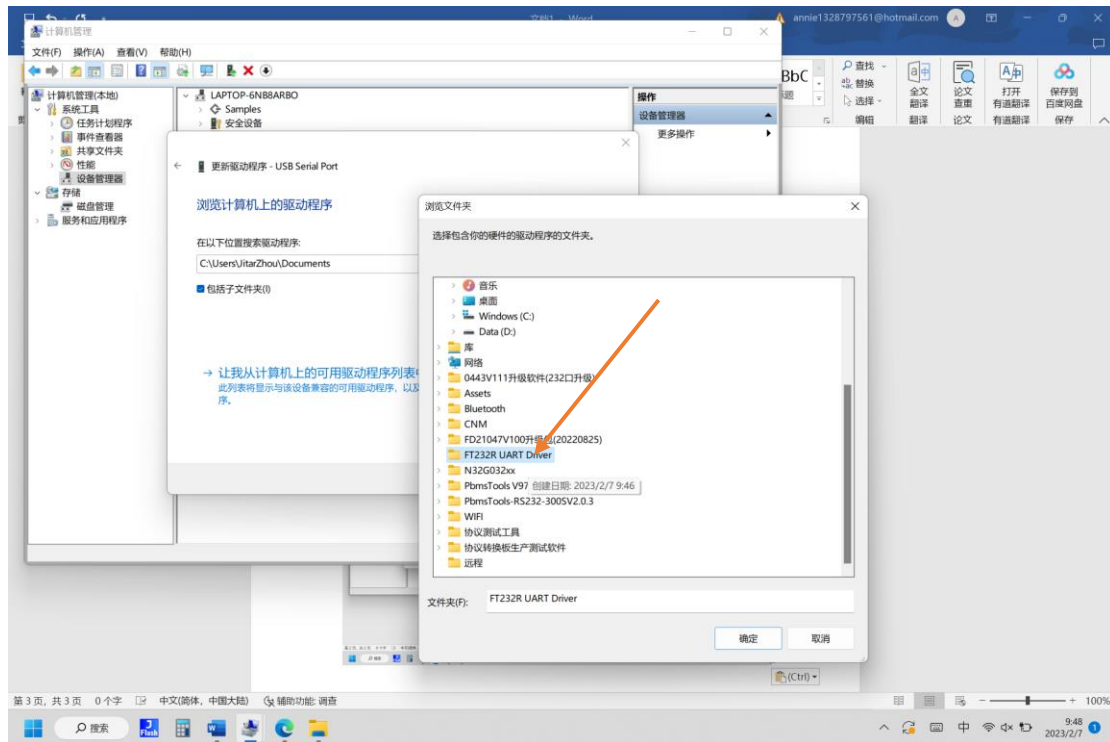

Driver installed successfully

