


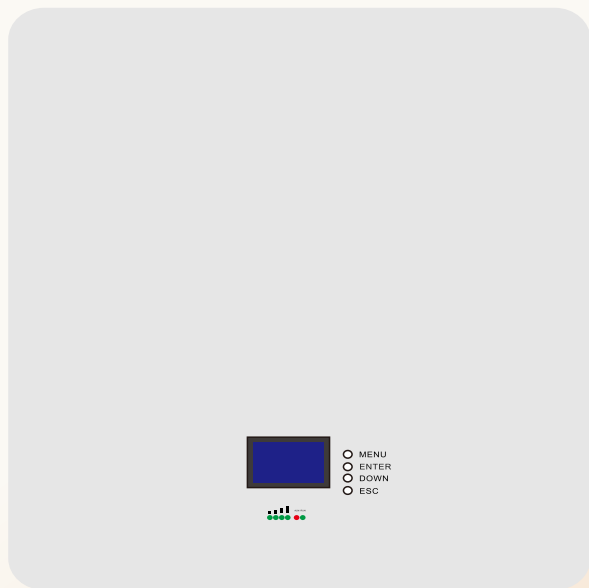

LiFePO4 Powerwall Battery

iPower Mini Series User Manual

Version:V1.0

CONTENTS

Information About The Manual	
1. SAFETY PRECAUTIONS	
2. PRODUCT OVERVIEW	
2.1 Brief introduction.....	03
2.2 Features	03
2.3 Specifications Performance	04
2.3.1 Battery Parameters	04
2.3.2 Interface Definition	05
2.3.3 Battery Management System.....	07
2.4 Label Description	08
2.4.1 Box Warning	08
2.4.2 Battery Nameplate	09
2.4.3 Product Barcode Label.....	09
3. INSTALLATION	
3.1 Checking Before Installation	10
3.1.1 Accessories Checking.....	10
3.1.2 Tools Needed.....	11
3.2 Safety Requirements.....	11
3.3 Electronic Checking	12
3.4 Environment Requirements.....	12
3.5 Space Requirements	13
3.6 Wall Mounted Installation.....	14
3.6.1 Single Used	14
3.6.2 Battery Parallel Used.....	14
4. OPERATION	
4.1 Electronic Connection.....	15
4.1.1 Cabling Introduction	15
4.1.2 Communication Port Definition	15
4.1.3 System Connection Diagram	16
4.1.4 Battery Single Used.....	17
4.1.5 Battery Parallel Used.....	18
4.2 Function And Commission	19
4.2.1 LCD Display Description.....	19
4.2.2 Indicator Description.....	22
4.2.3 Buzzer Operation	23
4.2.4 RST Key Description	23
4.2.5 Sleep&Activation Operation.....	24
4.2.6 Battery Monitoring.....	24
5. CARE AND MAINTENANCE	
5.1 Care	29
5.2 Maintenance.....	29
6. FAQ AND TROUBLESHOOTING	
6.1 FAQ	30
6.2 Troubleshooting	31

Preface

This users manual describes the Powerwall battery in terms of basic specification, installation, electrical connections, functions, maintenance, and troubleshooting. Please read this document through before installing and operating it.

● NOTE

Depending on different contract, product version and market region, details may appear slightly different.

Symbol Conventions

Please pay particular attention to the information provided by the following symbol.

01

Symbol	Description
	Indicates a hazardous situation which, if not avoided, could result in injury or death
	Indicates a hazardous situation which, if not avoided, could result in minor injury or damage to the equipment
	Indicates potentially hazardous situations which, if not avoided, could cause damage to the battery, loss of data, or impairment of performance. NOTICE is used to address practices not related to personal injury
	Indicates important supplements that leads to the best result, but is not safety or damage related

1.SAFETY INSTRUCTIONS

Reminded

⚠ WARNING

Do not expose cable outside.

⚠ CAUTION

- Do not connect battery with PV solar wiring directly.
- Do not use cleaning solvents to clean the battery.

⚠ NOTICE

- If the battery is stored for long time , it is required to charge them every six months, and the SOC should be no less than 60%.
- Battery needs to be recharged within 12 hours, after fully discharged.

● NOTE

Please contact the supplier within 24 hours if there is something abnormal.

Before Connecting

⚠ WARNING

It is prohibited to connect the battery and AC power directly.

⚠ CAUTION

- The embedded BMS in the battery is designed for 48VDC, please DO NOT connect battery in series.
- Before installation, be sure to cut off the grid power and make sure the battery is in the turned-off mode.
- Wiring must be correct, do not mistake the positive and negative cables, and ensure no short circuit with the external device.

⚠ NOTICE

- It is prohibited to connect the battery with different type of battery.
- Keep the battery away from water and fire.

● NOTE

- After unpacking, please check product and packing list first, if product is damaged or lack of parts, please contact with the local retailer.
- Please ensure the electrical parameters of battery system are compatible to related equipment.

In Using

⚠ WARNING

In case of fire, only dry powder fire extinguisher can be used, liquid fire extinguishers are prohibited.

⚠ CAUTION

If the battery system needs to be moved or repaired, the power must be cut off and the battery is completely turned off.

2.PRODUCT OVERVIEW

2.1 Brief Introduction

iPower series LiFePO₄ battery is specially tailored for energy storage system, it offers a greater efficiency, higher reliability, intelligent battery management system, intelligent battery monitoring system, long lifespan to your solar energy backup.

iPower series LiFePO₄ battery is ideal for off-grid and hybrid applications, offering a solution that's built for the long run and has the ability to be deployed and used in a variety of scenarios, for instance, residential, farm, factory, data room, holiday hotel, etc.

2.2 Features

- ▶ Lithium iron phosphate chemical material, which endows iPower safer performance, longer service life and superior energy density.
- ▶ The fully intelligent battery management system (BMS) protects battery pack and cells from over-current, under-voltage, over-voltage, impulse current, short circuit, and severe temperature damage, which further increases the safety performance of battery.
- ▶ The intelligent monitoring system allows you to monitor and download real time data of your iPower in on your computer.
- ▶ The cell balancing function greatly extends the service life of the battery pack.
- ▶ Without any memory effect, you can deep charge and release your iPower.
- ▶ With tiny self-discharge consumption, the battery will automatically enter low power consumption mode if you don't use it for more than 24 hours.
- ▶ Environmentally friendly. No heavy metals and no harmful substances, iPower meets ROHS requirements.
- ▶ Scalability. Multiple battery packs can be used in parallel, which is suitable for any scenario that requires greater power backup.
- ▶ Maintenance-free. iPower requires no active maintenance, a one-time purchase guarantees longevity (assuming you're using a properly fitted battery and following usage guidelines).
- ▶ Comply with IEC62619, CE, ROHS, UN38.3 requirements.

2.3. Specifications Performance

2.3.1 Battery Parameters


Table 2-1

Series	iPower Mini			
Battery Type	LiFePO4			
Model	YL-W4850	YL-W48100	YL-W48150	YL-W48200
Nominal Voltage[V]	48			
Nominal Capacity[Ah]	50	100	150	200
Nominal Energy[kWh]	2.4	4.8	7.2	9.6
Max. output Power[kW]	2.4	4.8	4.8	4.8
Net Weight[kg]	30	51	85	87
Dimension [mm]W*D*H	410*450*144	480*520*167	610*630*167	520*520*230
Working Voltage[V]	40~54			
Operating Temperature Charging[°C]	0~55			
Operating Temperature Discharging[°C]	-20~60			
Max. Charge Current[A]	50	100		
Max. Discharge Current[A]	50	100		
Recommend Charge Current[A]	10	20	30	40
Charge Mode	CC-CV			
Communication	CAN/RS485/RS232/Dry Contact			
IP Level	IP30			
Temperature & Period Storage[°C]	Less than 6 Month@-10°C~35°C			
	Less than 3 Month@-10°C~45°C			
	Less than 1 Month@-20°C~45°C			


2.3.2.Interface Definition

a) The Battery appearance is shown in below figure as a reference

LCD Screen&LED Electricity volume indicator

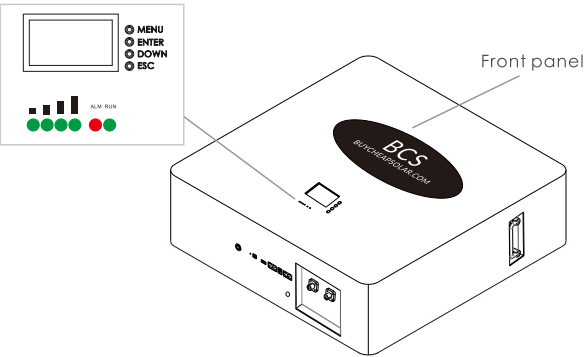


b) The Battery dimension is shown in below figure as a reference

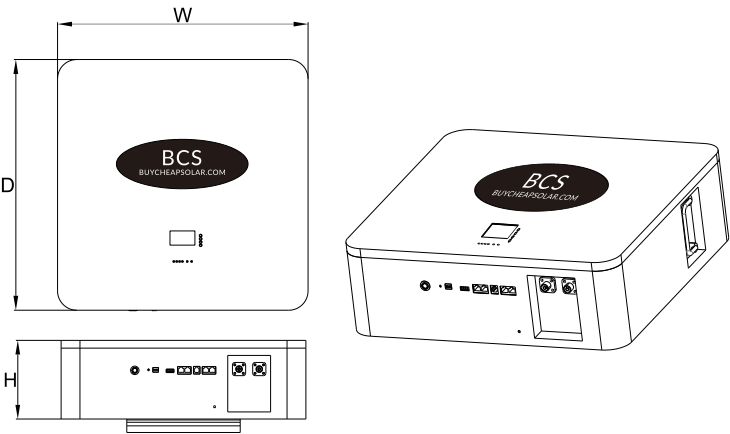

iPower Mini LiFePO4 Battery

Model	YL-W4850	YL-W48100	YL-W48150	YL-W48200
Energy[kWh]	2.4	4.8	7.2	9.6
Width[mm]	410	480	610	520
Height[mm]	144	167	167	230
Depth[mm]	450	520	630	520

c) Bottom area and all the interfaces is shown in below figure as reference

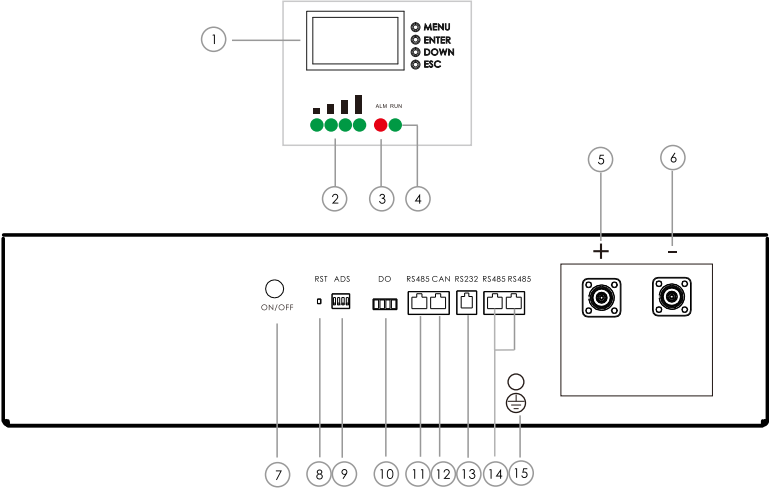

No.	Items	Description
①	LCD Screen	Display the battery's data
②	Capacity Volume Indicator	Display the battery's capacity
③	ALM Alarm Indicator Light	Red-trouble-light on
④	Working Indicator Light	Display state information
⑤	+ Power Terminal	Power cable terminals: there are two pair of terminals with same function, one connect to equipment, the other one paralleling to other battery module for capacity expanding,for each single module, each terminal can achieve charging and discharging function.
⑥	- Power Terminal	
⑦	Power Switch	To turn ON/OFF the whole battery
⑧	Reset Key	Sleep /Activation /Reset
⑨	ADS Dialer	4 ADD switches, to definite different address code for each battery module when multiple modules are cascaded, up to 15 addresses.
⑩	Dry Contact Terminal	1/2 Normally open, closed during fault protection; 3/4 Normally open, closed when a low battery alarm.

No.	Items	Description
⑪	RS485	RJ45 Port,used to connect to the inverter's RS485 port
⑫	CAN	RJ45 Port,used to connect to the inverter's CAN port
⑬	RS232	RJ11 Port,used battery condition monitoring or manufacturer to debug or service
⑭	RS485	RJ45 Port,used communication in parallel
⑮	Grounding Point	Safety

2.3.3 Battery Management System

Function	
Alarm	Protection
Cell Over-charge Voltage	Cell Over-charge Voltage
Cell Over-discharge Voltage	Cell Over-discharge Voltage
Pack Over-charge Voltage	Pack Over-charge Voltage
Pack Over-discharge Voltage	Pack Over-discharge Voltage
Over-current Charge	Over-current Discharge
Over-current Discharge	Over-current Discharge
Mos Over Temperature	Mos Over Temperature
Cell Charge Low Temperature	Cell Charge Low Temperature
Cell Charge Over Temperature	Cell Charge Over Temperature
Cell Discharge Low Temperature	Cell Discharge Low Temperature
Cell Discharge Over Temperature	Cell Discharge Over Temperature
Environment Low Temperature	Environment Low Temperature
Environment Over Temperature	Environment Over Temperature
	Short Circuit Protection
	Fault Protection

2.4 Label Description

2.4.1 Box Warning Label



WARNING

CAUTION. Please read all safety precautions and users manuals before use or operation.

WARNING: Risk of Fire explosion or burns:

- **DO NOT** short the battery terminals.
- **DO NOT** incinerate crush or disassemble.
- **DO NOT** over charge or over discharge.
- **DO NOT** reverse connections(polarity) from charge to battery.
- **DO NOT** operate battery beyond published voltage current and temperature limits.















Symbol	Symbol Name	Symbol Description
	Warning	Be careful with your actions and be aware of the dangers
	Anti-electric Shock Warning	Battery voltage is higher than safe voltage, direct contact with electric shock hazard
	Beware Of Fire	Serious improper operation will cause battery failure and cause fire
	View Manual	Read the user manual before using
	No Burning	Strictly prohibit all sources of fire
	Recyclable	After the battery life is terminated, the battery can continue to be used after it recycled by the professional recycling organization and do not discard it at will
	Don't Throw Into The Trash Can	The scrapped battery cannot be put into the garbage can and must be professionally recycled

2.4.2 Battery Nameplate(YL-W48200 as an example)

1

2

3

Rechargeable Li-ion Battery System

Model:YL-W48200

Battery Designation:IFp55/175/208[15S]E/-10+30/95

Nominal Voltage:48V

Rated Capacity:200Ah

Charge Current:0-100A

Discharge Current:0-100A

Watt-hour:9600Wh

Recommended Charge Current:40A

Charge Temperature:0-55°C

Discharge Temperature:-20-60°C

Date:20210905

Certification & Safety Standard:

CE/UN38.3/IEC62619/EN61000-3/EN61000-6/ROHS/MSDS

 UN 38.3  CE IEC62619

No.	Description
1	Trademark and product type
2	Important technical parameters of the product
3	Identification of the certification system that the product complies with

Symbol	Symbol Name	Symbol Description
	ROHS	The battery product meets Restriction of Hazardous Substances
UN 38.3	UN38.3	The battery product meets United Nations Manual of Tests and Standards for Transport of Dangerous Goods
	MSDS	The battery product meets Material Safety Data Sheet
CE	CE	The battery product meets European directive requirements
IEC62619	IEC62619	The battery product meets IEC requirements

2.4.3 Product Barcode Label



BCS07004120210910001

NOTE


Each product has a unique barcode.

3. INSTALLATION

3.1 Checking Before Installation

3.1.1 Accessories Checking

- ▶ When the equipment arrives at the installation site, loading and unloading should be carried out according to the rules and regulations, so as to prevent from being exposed to sun and rain.
- ▶ Before unpacking, the total number of packages shall be indicated according to the shipping list attached to each package, and the case shall be checked for good condition.
- ▶ In the process of unpacking, handle with care and protect the surface coating of the object.
- ▶ Open the package, the installation personnel should read the technical documents, verify the list, according to the configuration table and packing list, ensure objects are complete and intact, if the internal packing is damaged, should be examined and recorded in detail.

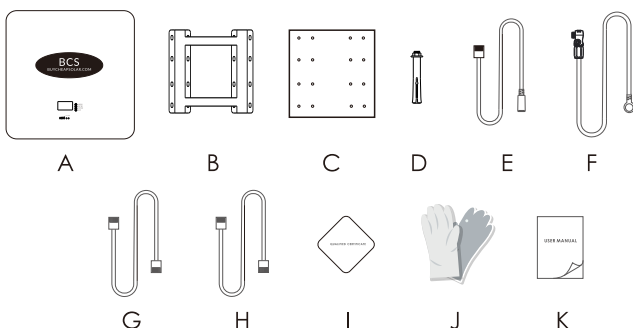

No.	Items	Qty	Remark
A	Battery	1	48V iPower mini
B	Wall-mounted Bracket	1	Material:SPCC
C	Positioning Cardboard	1	Mark screw hole position
D	Expansion Screw And Tube	16	M8;Fixed bracket
E	RS232 Communication Cable	1	USB connector to RJ45 connector; Length 1.5m
F	Power Cable	2	One positive and negative pole each, one end connected to the battery, one end to the inverter; Length 1.5m
G	Communication Cable	1	RJ45 connectors,Parallel battery communication,Length 1m
H	Communication Cable	1	RJ45 connectors, connected battery and inverter,Length 2m
I	Qualified Certificate	1	QC PASS
J	Insulated Gloves	1	Protect hands
K	USER MANUAL	1	For users to refer to, install, and train

3. 1.2 Tools Needed



Mark Pen



Electric drill



Hammer



Torque wrench

3.2 Safety Requirement

This system can only be installed by personnel who have been trained in the power supply system and have sufficient knowledge of the power system; The safety regulations and local safety regulations listed below should always be followed during the installation.

- ▶ All circuits connected to this power system with an external voltage of less than 48V must meet the SELV requirements defined in the IEC60950 standard.
- ▶ If operating within the power system cabinet, make sure the power system is not charged. Battery devices should also be switched off.
- ▶ Distribution cable wiring should be reasonable and has the protective measures to avoid touching these cables while operating power equipment.
- ▶ When installing the battery system, must wear the protective items below:

11



Insulated gloves



Safety goggles




 


Safety shoes



Mask

- ▶ The battery should be installed vertically on the wall. Please refer to below figure:

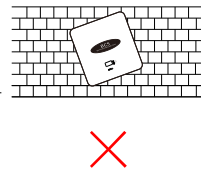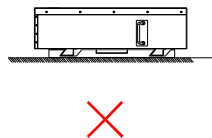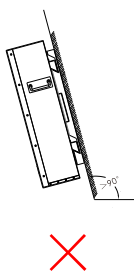

- ▶ Firefighting equipment should be provided near the equipment, such as portable dry powder fire extinguisher.

- Automatic fire fighting system shall be provided for the case where necessary.
- No flammable, explosive and other dangerous articles are placed beside the battery.

3.3 Electronic Checking

- Check that the equipments connected with batteries are right and in good conditions.
- Check the DC interface position of the equipment, check and confirm the output voltage is in the range shown in table 2-1.
- Check DC device interface, make sure the maximum output current is matched with the selected battery.
- Check the maximal working current of devices backed by the battery, make sure that the current is less than the maximum discharge current of the products shown in table 2-1.

3.4 Environmental Requirements


- Working temperature: $-20^{\circ}\text{C} \sim +60^{\circ}\text{C}$.
Charging temperature range is $0^{\circ}\text{C} \sim +55^{\circ}\text{C}$;
Discharging temperature range is $-20^{\circ}\text{C} \sim +60^{\circ}\text{C}$
- Storage temperature: $-10^{\circ}\text{C} \sim +45^{\circ}\text{C}$.
- Relative humidity: $5\% \sim 85\%\text{RH}$.
- Elevation: no more than 4000m.
- Operating environment: no conductive dust and corrosive gas sites.
- Installation location should be away from the sea to avoid brine and high humidity environment.
- The ground is flat and level.
- There is no flammable explosive near to the installation places.
- The optimal ambient temperature is $15^{\circ}\text{C} \sim 35^{\circ}\text{C}$.
- Keep away from dust and messy zones.

NOTICE

If the ambient temperature is out of the operating range, it will trigger the battery temperature protection function to turn off working. The optimal temperature range for the battery pack to operate is 15°C to 35°C . Frequent exposure to harsh temperatures may deteriorate the performance and life of the battery pack.

3.5 Space Requirements

Clearance Requirements: To ensure battery working normally and easy to operate, there are requirements on available spaces of the battery, e.g. to keep enough gap. Refer to below figure:

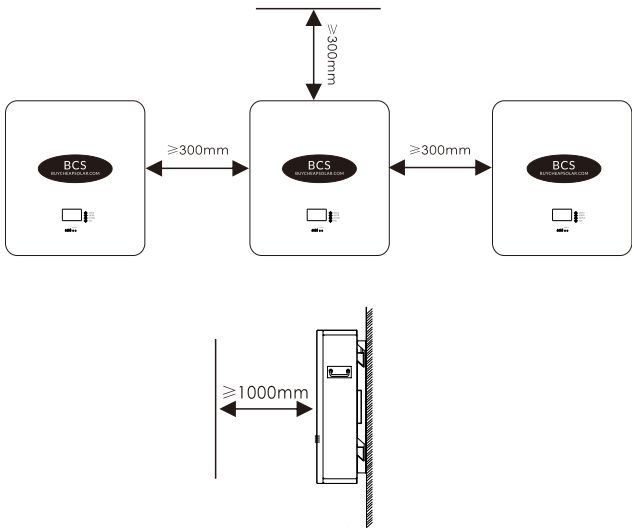

13

WARNING

Please install the battery out of the reach of children.

CAUTION

Please make sure the wall thickness is over 80mm.

NOTE

When multiple install the batteries in one location, to optimize the installation and increase performance and safety of system, it's recommended to always follow below instructions when install batteries. Refer to below figure:




3.6 Wall Mounted Installation

3.6.1 Install The Wall-mounting Bracket


a) Use the positioning board provided with the goods to draw the opening position of the screw with a marker on the wall.

b) 16 holes with diameter of 10mm shall be opened on the wall with electric drill according to the marked position, and the hole depth shall be greater than 50mm to fit the expansion bolts of M8.

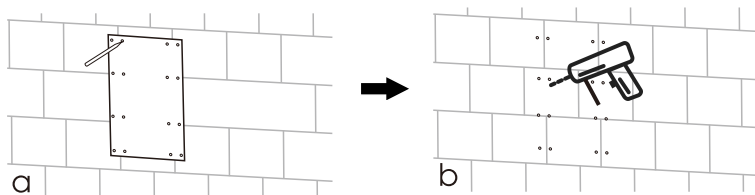

c) Use a hammer to fix the expansion bolt M8 in the hole on the wall.


d) The bracket is fixed on the wall with M8 bolts, and then the nuts are tightened to control the torque of 10N.M.

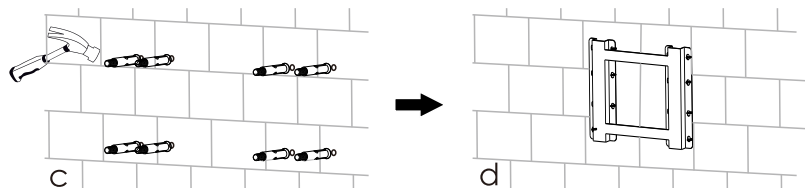

14

3.6.2 Install The Battery On The Wall-mounting Bracket

Raise the battery a little higher than the mounting frame while maintaining the balance of the battery. Hang the battery on the frame through the match hooks.

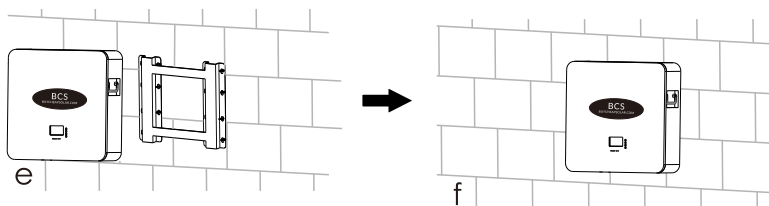

WARNING

 
In order to prevent any electric shocks or other injuries, please make sure there are no electricity, plumbing or gas pipeline in the wall where selected to drilling holes for installation.

4. OPERATION

4.1 Electronic Connection

4.1.1 Cabling Introduction


The battery output terminal is the fast connector of energy storage products, the power cable (positive pole, negative pole) plug can be directly inserted into the battery socket, Power cable section 25mm².



No.	Items	Remark
1	OT Terminal	SC25-8
2	Cable	Cross-section:25mm ²
3	Connector Terminal	Rated current: 120A

4.1.2 Communication Port Definition

RJ45 Communication Port Definition

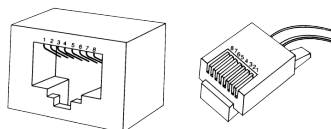


Pin	RS485-----8P8C RJ45 Port	CAN-----8P8C RJ45 Port
	Function Description	Function Description
1	RS485-B	NC
2	RS485-A	NC
3	GND	NC
4	NC	CANL
5	NC	CANH
6	GND	NC
7	RS485-A	GND
8	RS485-B	NC

NOTE


Different inverters have different pin definitions, please pay attention to the compatibility with batteries.


RJ11 Communication Port Definition

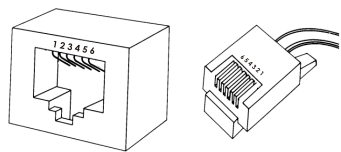


RS232-----6P6C RJ11 Port	
Pin	Function Description
1	NC
2	NC
3	BMS Transmit, PC Receive
4	PC Transmit, BMS Receive
5	GND
6	NC

 4. 1.3 System Connection Diagram

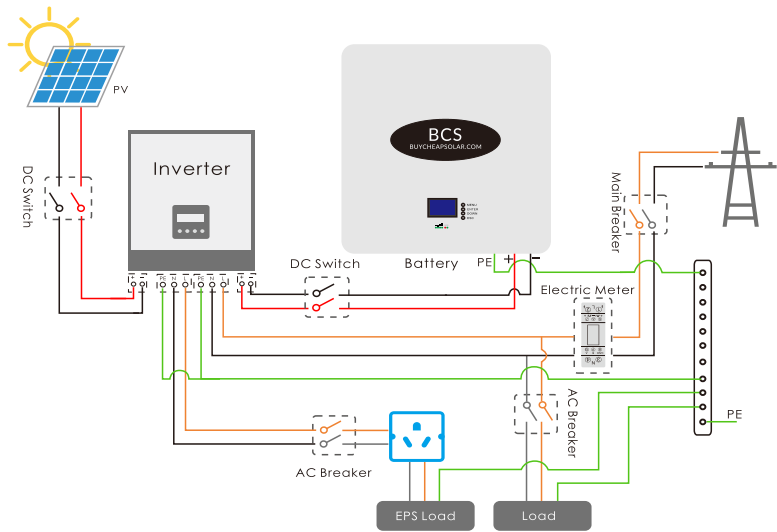

Cable Color	Description	Cable Color	Description
	Positive Power Cable		Live Wire
	Negative Power Cable		Neutral Wire
	Ground Wire		

4. 1.4 Battery Single Used

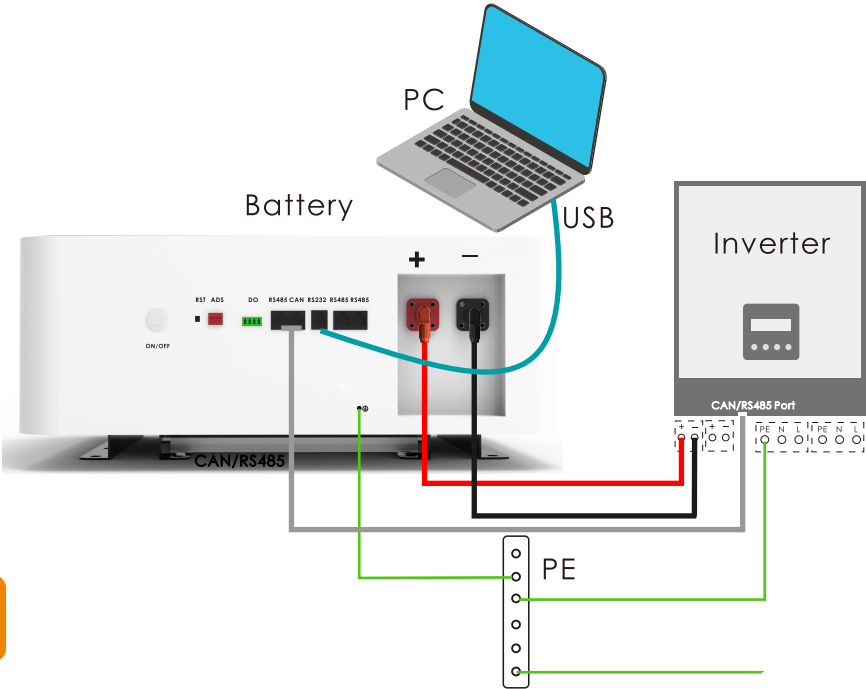

17

Cable Color	Description	Cable Color	Description
	Positive Power Cable		Ground wire
	Negative Power Cable		The Communication Line Connecting The Battery And The PC
	Communication Line Connecting Battery And Inverter		


NOTICE

Before connection, the positive and negative pole of the inverter input interface and the battery output interface should be confirmed, The red power line is connected to the positive pole and the black power line is connected to the negative pole.

NOTE

Only when you need to monitoring the battery status, connecting battery with PC is necessary.

4. 1.5 Battery Parallel Used

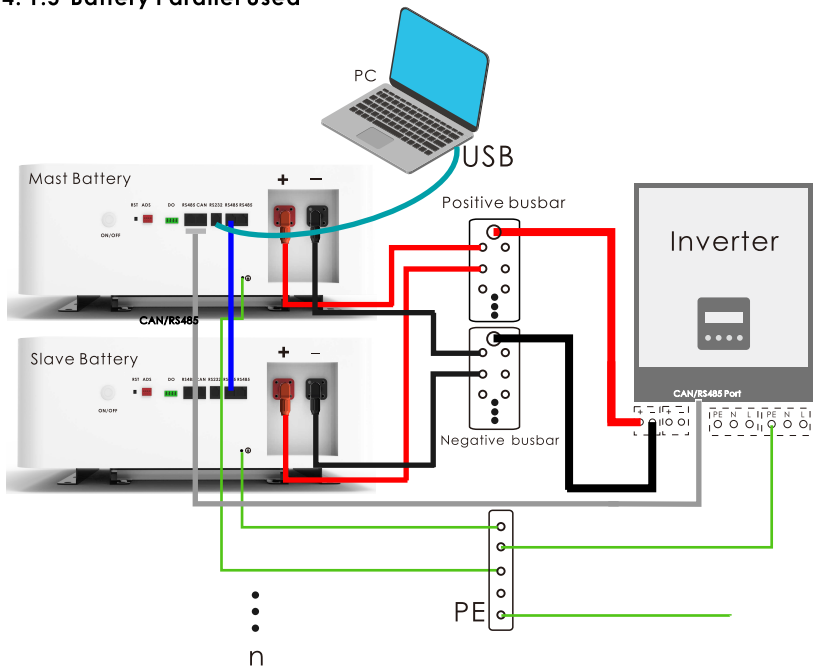

Cable Color	Description	Cable Color	Description
	Positive Power Cable		Ground Wire
	Negative Power Cable		The Communication Line Connecting The Battery And The PC
	Communication Line Connecting Battery And Inverter		Communication Line Connecting Battery And Battery In Parallel

NOTE

While in parallel communication, the dial-up addresses of battery module are 1,2,3,4.....14,15, where 1 stands for the main engine, the data of other batteries are uploaded to the main engine conducts unified uploading.The host computer with dial-up code of 1 to connect with upper computer.



4. 2 Function and Commission

4. 2.1 LCD Display Description


Refer to below flow chart which shows the information option interfaces and interconnection. Operator can search target information by following below directions.




Each item starts with "»" or "--", where "»" displays the current cursor position, press the "DOWN" key to move the cursor position; end with the item "»", the content of the item is not displayed, press "ENTER" You can go to the corresponding page.

The LCD screen will automatically go off after one minute of inactivity, and will automatically light up after pressing any key.

a) Enter the display menu interface.

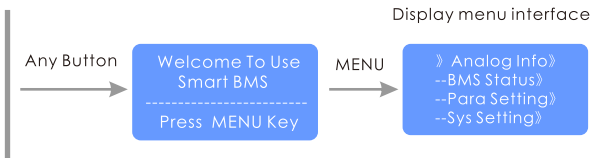


b) Steps for viewing product total voltage and current information.

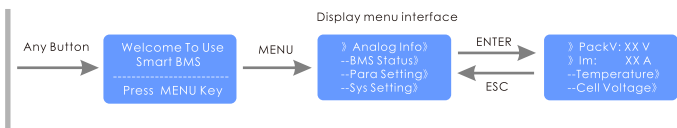


No.	Items	Description
1	PackV	Pack Voltage
2	Im	Current(Positive number when charging, negative when discharging, 0A when no operation)
3	XX	Actual value

c) Steps for viewing product Temperature information.

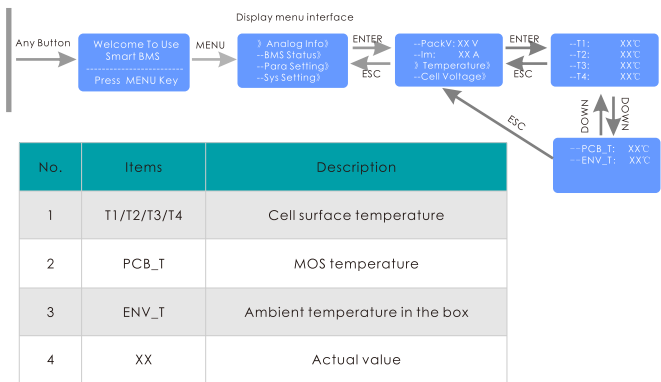


d) Steps for viewing product Cell Voltage information.

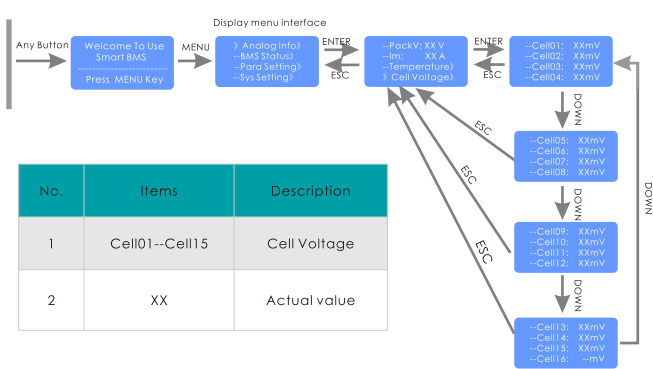


20


e) Steps for viewing product Cell Capacity information.

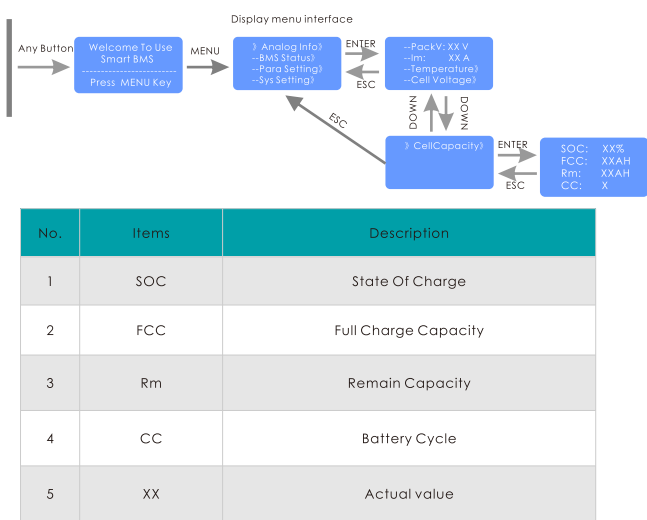

f) Steps to view product BMS protection times information

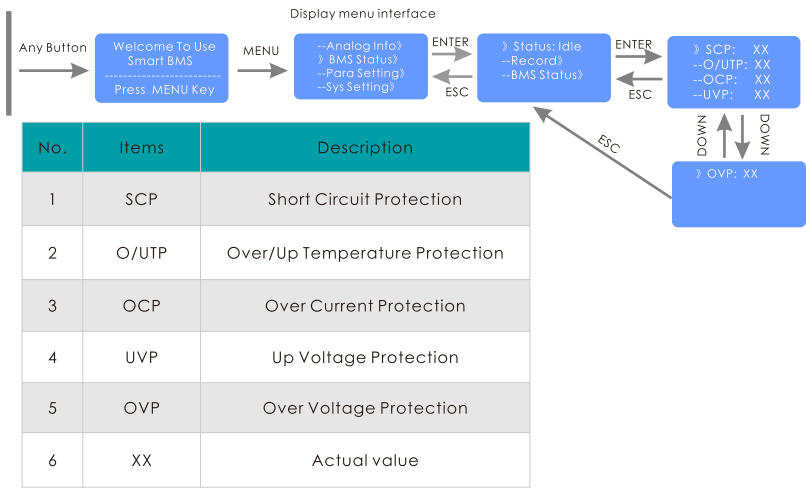

g) Steps to view product BMS real-time protection status information

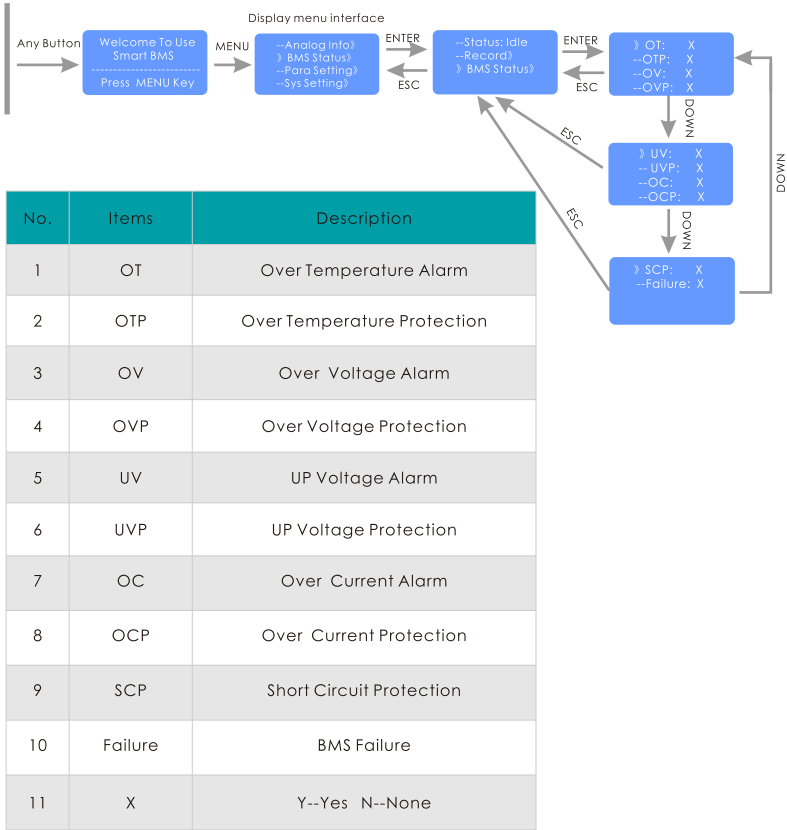

4. 2.2 Indicator Description

a)There are 6 LEDs on front panel to show the battery working status:

PACK Status	Normal/Alarm/Protection	RUN	ALM	SOC Indication LEDs				Remark
Power Off	Sleep							All Off
Standby	Normal	Flash 1		Indication by SOC				Standby state
	Alarm	Flash 1	Flash 3					Cell low voltage
Charge	Normal			Indication by SOC(The top SOC LED flash2)				ALM LED is OFF When Cell Over-Charge or PACK Over-charge Alarm
	Alarm		Flash 3					
	Over Charge Protection							If no mains supply, LED as standby
	Temperature Protection; Over-Current Protection; Short Circuit Protection; Fault Protection							Close Charge
Discharge	Normal	Flash 3		Indication by SOC				
	Alarm	Flash 1	Flash 3					
	Under Discharge Protection							Close Discharge
	Temperature Protection; Over-Current Protection; Short Circuit Protection; Fault Protection							Close Discharge
Fault								Close Charge;Close Discharge

b) LED Capacity Indicators Status Description:

Status		Charge				Discharge			
Capacity Indication		L4	L3	L2	L1	L4	L3	L2	L1
SOC(%)	0~25%				Flash2				
	25-50%			Flash2					
	50~75%		Flash2						
	75~100%	Flash2							
RUN Indication						Flash3			

c) LED Indicators Flash Description:

Flash Mode	ON	OFF
Flash1	0.25S	3.75S
Flash2	0.5S	0.5S
Flash3	0.5S	1.5S

4. 2.3 Buzzer Operation

Mode	Status Description
Fault	Buzzing 0.25S per 1S
Protection	Buzzing 0.25S per 2S(Except for Over-Voltage Protection)
Alarm	Buzzing 0.25S per 3S(Except for Over-Voltage Alarm)

NOTICE

The buzzer function can be turned on or off through the software, and the default is turned off.

4. 2.4 RST Button Operation

Mode	Operation Method
Activation	When BMS is sleeping, press the "RST" button for 3~6S,BMS is activation when the LED lights flicker from "RUN" light to the lowest capacity indicator
Sleep	When BMS is activation, press the "RST" button for 3~6S,BMS is sleep when the LED lights flicker from the lowest capacity indicator to "RUN" light
Reset	When BMS is activation, press the "RST" button for 6~10S,BMS is reset when the LED indicators all light up at the same time

NOTICE

When "BMS" need to sleep and activate, the "RST" button can be use.

NOTICE

When the "BMS" shows that the data measurement is inaccurate, the "RST" button can be used. In this case only qualified and trained electrical technicians are allowed to operate the value modifications.Operation personnel should understand the composition and working principles of the battery system.

4. 2.5 Sleep&Activation Operation

The battery cell or PACK enters the sleep mode after over-discharge protection, and wakes up every 4 hours at regular intervals to turn on the charge and discharge MOS. If it can be charged, it will exit the sleep state and enter normal charging; if it cannot be charged after 10 consecutive automatic wake up, it will not wake up automatically.

When the BMS is defined as the end of charging, after 2 days of standby (standby time set value), the recovery voltage is not reached, and the charging is forced to resume until the end of the recharge.

Mode	Status	Remark
Sleep	Cell or PACK over-discharge protection is not released within 60S	Before entering sleep, make sure that the input is not connected to an external voltage, otherwise you will not be able to enter sleep mode
	When BMS is activation, press the "RST" button for 3~6S	
	The lowest cell voltage is lower than the sleep voltage, and the duration reaches the sleep delay time (no communication, no protection, no balance, no current)	
	Standby time is greater than 24 hours (no communication, no charge and discharge, no mains)	
	Forced sleep through software	
Activation	Connect the charger, the charger output voltage is greater than 48V	When the BMS is in sleep mode
	When BMS is Sleep, press the "RST" button for 3~6S	
	Communication activation (RS232/RS485)	

4. 2.6 Battery Monitoring

The cable connects the battery to the computer, and the battery can be monitored through software.

a) Software Running Environment

The software running on the PC and its compatible computer, using the WINDOWS operating system. System environment requires Microsoft.net Framework version 2.0 or above Framework support, please make sureyou have installed well before use, installation is as follows:



Step 1 : Download Microsoft version of Microsoft.net Framework.



Step 2: Double-click the downloaded program to install (different versions of the installation steps,but follow the Microsoft instructions).




Step 3: The software does not need to be installed independently, only the environment content, double-click the exe file to run,The runtime displays the software's main interface.

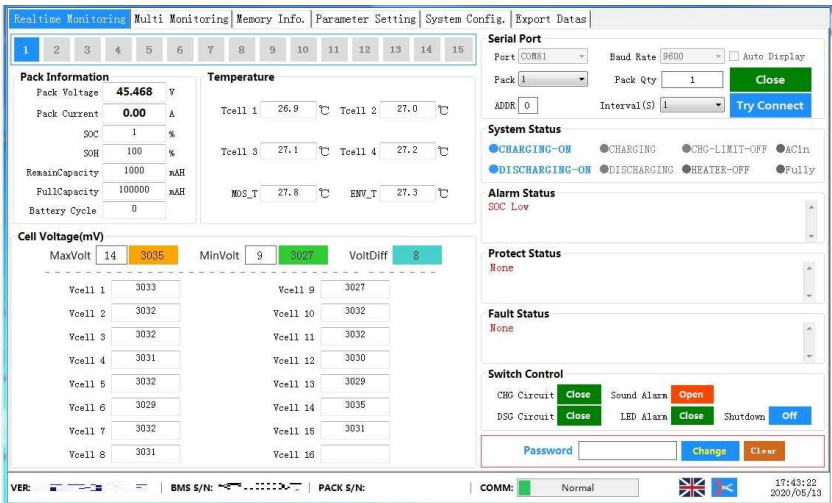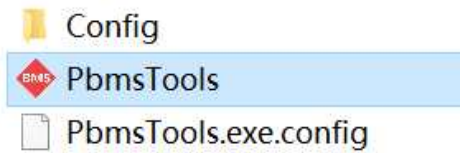


25

Step 4: After open the main interface , the software will automatically search all the existing serial port,if found effective serial port, and will automatically connect the serial port communication, real-time read battery information, temperature, monomer voltage, the system state and alarm status, such as protection, fault state battery parameters, If an effective serial port is not found, it will be prompted to open the serial port and start the monitoring manually,Unsuccessful search for serial prompt .

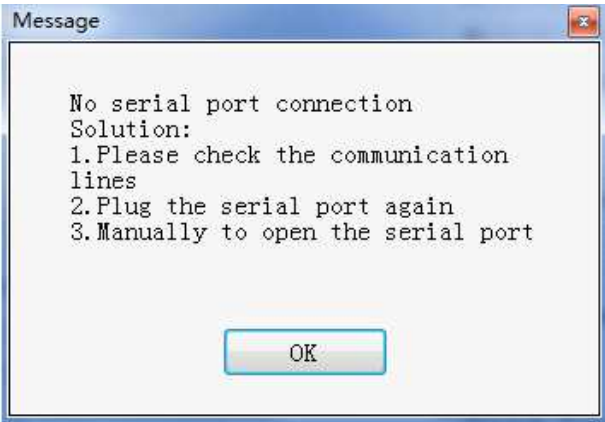


b) Install USB Turn Interface Drive


Step 1 : Double click the SETUP button to enter the installation interface.

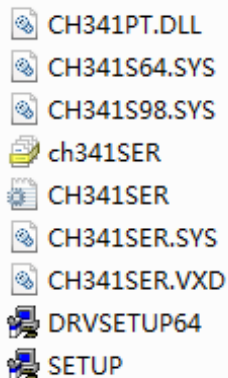


Step 2 : Double click the SETUP button to enter the installation interface.

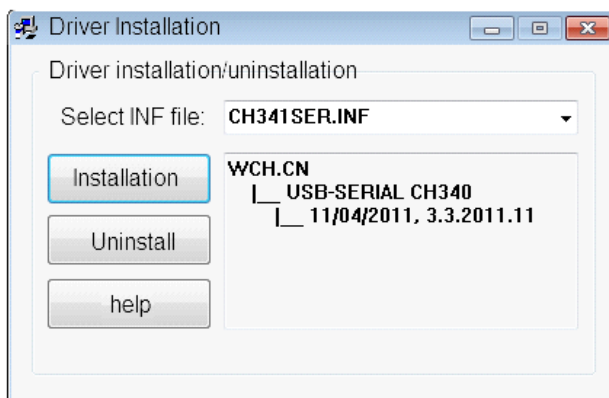

Step 3 : Click the install button, and install it, wait until finished the installation.

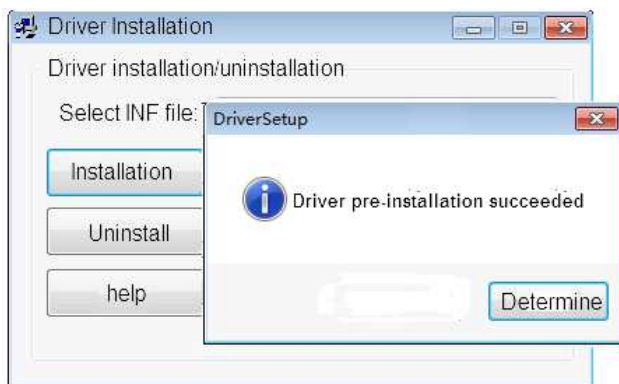

27

 

The screenshot displays the PMS2 V2.5 software interface with the following sections and highlighted values:

- Top Bar:** PmsTools V2.5 (编号P03047-1)
- Navigation Tabs:** Realtime Monitoring (selected), Multi Monitoring, Memory Info, Parameter Setting, System Config, Export Data
- Pack Information:**
 - Pack Voltage: 45.468 V
 - Pack Current: 0.00 A
 - SOC: 1 %
 - SOH: 100 %
 - RemainCapacity: 1000 mAh
 - FullCapacity: 100000 mAh
 - Battery Cycle: 0
- Temperature:**
 - Tcell 1: 26.9 °C, Tcell 2: 27.0 °C
 - Tcell 3: 27.1 °C, Tcell 4: 27.2 °C
 - MOS_T: 27.8 °C, ENV_T: 27.3 °C
- Cell Voltage (mV):**
 - MaxVolt: 14 | 3035
 - MinVolt: 9 | 3027
 - VoltDiff: 8
 - Table of cell voltages (Vcell 1 to Vcell 16) ranging from 3027 to 3033 mV.
- Serial Port:**
 - Port: COM1
 - Baud Rate: 9600
 - Auto Display: ☐
 - Pack: 1
 - Pack Qty: 1
 - Close button
 - ADDR: 0
 - Interval (S): 3
 - Try Connect button
- System Status:**
 - CHARGING-ON (selected)
 - CHARGING
 - CHG-LIMIT-OFF
 - ACin
 - DISCHARGING-ON
 - DISCHARGING
 - HEATER-OFF
 - Heully
- Alarm Status:** SOC Low
- Protect Status:** None
- Fault Status:** None
- Switch Control:**
 - CH3 Circuit: Close
 - Sound Alarm: Open
 - DSG Circuit: Close
 - LED Alarm: Close
 - Shutdown: Off
- Bottom Bar:**
 - VER: 1.2
 - BMS S/N: 13
 - PACK S/N: 14
 - COMM: Normal
 - Password: 11
 - Change button
 - Clear button
 - Time: 17:44:22 2020/05/13

No.	Main control instructions	Remark
1	Port	Select the drop-down option and select the serial port to communicate. Available when the serial port is not opened
2	Baud Rate	Optional drop down, choosing the baud rate for communication. Available when the serial port is not opened
3	Pack	You can select the drop-down item, the current read Pack, and the RS232 interface to the host when you select FF, and you can get all the Pack data. Available when monitoring is not started
4	Pack Qty	Read-only values, the number of Pack packs that were read from the BMS board when applied to multi-machine parallel, from the main Pack to the Pack data
5	ADDR	A read-only value, the current read BMS address values
6	Interval(s)	Optional items. This PC to read data from the BMS samples of time interval
7	Open/Close	Alternate function button, open or close serial port
8	Start Monitor	Alternate function button, start or stop the monitoring, monitoring time and frequency of data read is 6 set time interval
9	Group Packs	The data key, which is the pack serial number, displays the pack that the current interface is reading and rendering with the blue bottom white. The "auto" button, alternate function button. When the three pack selects the FF and starts the monitoring, the automatic loop displays the various pack data (applied in parallel for multiple machines)
10	System Status	When a system state occurs, the text is blue. Gray means not happening
11	Administrator Password bar	Some Settings are required for the administrator password to be used, such as some functionality in system Settings. (note: when the password is correctly entered, the input box will be green, and you have access to the administrator)
12	Versions	BMS software version number
13	BMS S/N	Barcodes for BMS boards
14	PACK S/N	Barcodes for PACK
15	COMM State	This software with BMS board status of communication. For effective when started monitoring and communication is normal.
16	Change Language	Display the national flag icon of the current language country, click to switch the language
17	Screenshot	Click to enter the screenshot state, and after you draw the screenshot area with the mouse, a toolbar will appear, and you can copy/save the screenshot
18	Time	PC time
19	Switch Control	When the button is red, it means the function processing is off, and when it is green, it means it is on

NOTICE

More information about battery protection settings, data downloading please read the Upper Computer Software Manual. Only qualified and trained electrical technicians are allowed to operate the value modifications. Operation personnel should understand the composition and working principles of the battery system.

5. CARE AND MAINTENANCE

5.1 Care

Before storing, make sure that the battery SOC is 50%-60%. Insulate it and store it in a cool and dry place. The recommended long-term storage temperature is 20°C -30°C. During storage, please charge the battery according to the following table:

Storage Temperature	Recharge Frequency	SOC
20~30°C	Every 6 Months	50%~60%

5.2 Maintenance

NOTICE

When replace the battery, install the same number and same type of battery.

WARNING

The battery system operates with hazardous voltages. Repairs must be carried out only by qualified maintenance personnel.

CAUTION

Even after the unit is disconnected from the power supply, the internal components are still connected to the battery cells, which is potentially dangerous.

CAUTION

Before carrying out any kind of service and/or maintenance, disconnect the batteries and make sure that no current and hazardous voltage exists in the terminals.

CAUTION

Only those who are fully familiar with battery and have the required precaution may replace the battery and supervise operations. Unauthorized personnel are strictly prohibited to disassemble the battery.

CAUTION

Verify that there is no voltage between the battery terminals and the ground before maintenance or repair. In this product, the battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground.

CAUTION

Battery may cause electric shock and have a high short-circuit current. Please remove all wristwatches, rings and other metal personal objects before maintenance or repair, and only use tools with insulated grips and handles for maintaining or repairing.

6. FAQ AND TROUBLESHOOTING

6.1 FAQ

Question 1: Why the charge current is only 20A or 0.5C?

Solution: The charge current depends on:

- The power of your charge devices;
- The settings of charge current limit module in battery pack;
- Charging communication data from the battery to the inverter.

When the inverter is connected to the battery in the user-defined mode and the charging current given by the inverter is more than 1C (default value), the battery's charging current module will work to limit the charging current to 20A to better maintain the battery.

Question 2: Can I set the value that triggers the Charge Current Limit Module to turn on?

Solution: You can set the value on battery software for PC. The max. setting value is 100A. (48V50Ah the max. setting value is 50A)

NOTE

For battery better maintenance, we do not recommend setting the charging current to exceed 0.2C.

Question 3: How many batteries do I need to configure my inverter?

Solution: It depends on:

- Your daily backup power requirements;
- The battery DOD;
- The output power of your inverter.

We suggest the configuration as below:

Off grid / hybrid inverter output power	3kw~5kw	5kw~6kw	6~8kw	8~12kw	12~15kw	15~17kw	17~20kw
Battery Model And Min Parallel QTY.	iPower 48V50Ah 2.4kWh * 2	iPower 48V50Ah 2.4kWh * 3	iPower 48V50Ah 2.4kWh * 4	iPower 48V50Ah 2.4kWh * 6	iPower 48V50Ah 2.4kWh * 7	iPower 48V50Ah 2.4kWh * 8	iPower 48V50Ah 2.4kWh * 10
	iPower 48V100Ah 4.8kWh * 1	iPower 48V100Ah 4.8kWh * 2	iPower 48V100Ah 4.8kWh * 2	iPower 48V100Ah 4.8kWh * 3	iPower 48V100Ah 4.8kWh * 4	iPower 48V100Ah 4.8kWh * 4	iPower 48V100Ah 4.8kWh * 7
	iPower 48V150Ah 7.2kWh * 1	iPower 48V150Ah 7.2kWh * 1	iPower 48V150Ah 7.2kWh * 2	iPower 48V150Ah 7.2kWh * 2	iPower 48V150Ah 7.2kWh * 3	4iPower 48V150Ah 7.2kWh * 3	iPower 48V150Ah 7.2kWh * 3
	iPower 48V200Ah 9.6kWh * 1	iPower 48V200Ah 9.6kWh * 1	iPower 48V200Ah 9.6kWh * 1	iPower 48V200Ah 9.6kWh * 2	iPower 48V200Ah 9.6kWh * 2	iPower 48V200Ah 9.6kWh * 2	iPower 48V200Ah 9.6kWh * 3

NOTICE

Before choosing the number of batteries you need, you need to consider your daily backup time requirements and the power match between the battery and the inverter, battery output power parameters shall greater than inverter's.

Question 4: Why the monitoring software show abnormal?

Solution: After connect the battery with computer by RJ11-USB cable. You need to download the USB driver to make sure the computer access to the battery data.

Question 5: Why not throw away used batteries at will?

Solution: After the used battery is abandoned, the outer casing of the battery will slowly corrode, and the metal substances in it will gradually penetrate into the water and soil, causing pollution. The biggest feature of metal pollution is that it cannot be degraded in nature and can only be eliminated through purification. On the other hand, the effective recovery of metals and the utilization of surplus energy can also bring considerable economic benefits.

6.2 Troubleshooting

Analysis and treatment of common faults.

Fault Phonemenon	Reason Analysis	Solution
The battery cannot be turned on	System protection	Battery cannot turn on, switch on the lights are all no lighting or flashing.If the battery external switch is ON, the RUN light is flashing, and the external power supply voltage is 48V or more, the battery still unable to turn on, please contact manufacturer
Red light is lighting, and cannot charge or discharge	System protection	Change power parameters; Charge the battery immediately(When over discharge protection)
DC power supply time is too short	Battery capacity become smaller	Storage battery replacement
The power line sparks once power on and ALM light RED	Power connection short-circuit	Turn off the battery, check the cause of the short circuit
Abnormal communication	PC cannot read device information	Whether the device is turned on; Is the PC software used correctly; Whether the PC software correctly reads the serial port; Signal line wiring and address are correct.

